

Mini Metal Easel – How to attach

Black Mini Metal Easel #4219, 3.5"x1.5" / 38,3x34,7 mm comes with pre-applied two-sided tape

When using it as an easel with Creative Borders Desktop Photo Panels:

- 1) Sublimate the photo panel.
- 2) Once cooled, lay the panel face down on a clean surface.
- 3) Remove the protective film from the adhesive square on the easel.
WARNING: Do not press the taped area of the easel down until alignment has been finalized. The adhesive is strong and difficult to remove once set.
- 4) For most designs, visually align the easel on the bottom center of the panel then once the placement is finalized place the easel with tape using firm pressure.
 - 4a) For horizontally oriented photos on the Berlin (# 4269), & Benelux (# 4268) center the easel on the back, then leave 1/4" or 32,45 mm of the easel below the bottom edge.
 - 4b) For the Pamplona Desktop Creative Border (# 4270), place the easel in between two of the curved "petals" for proper display, leave 1/4" or 32,45 mm of the easel below the bottom.
 - 4c) For the Prague (# 4271), leave 1/4" or 32,45 mm of the easel below the bottom of the panel.
- 5) Allow 24 hours for the adhesive to set.
- 6) To adjust the easel for display: Once the adhesive is set, place the panel face down on a clean surface. Firmly hold your thumb over the top portion of the easel, then with your other hand, slowly bend the bottom section of the easel (below the scored line) up to a 30–45 degree angle.

Your Creative Borders Desktop Photo Panel is now ready to display!



Please note: Repeated bending of the easel will result in breakage.